# REFRIGERATOR

## MODELS:

WRF989SDAW00 (White)
WRF989SDAH00 (White Ice)
WRF989SDAB00 (Black)
WRF989SDAE00 (Black Ice)
WRF989SDAM00 (Monochromatic Stainless Steel)
WRF989SDAF00 (Sparkle Steel)


© 2014 Whirlpool Corporation
Part No. W10462103 Rev. D

# CABINET PARTS

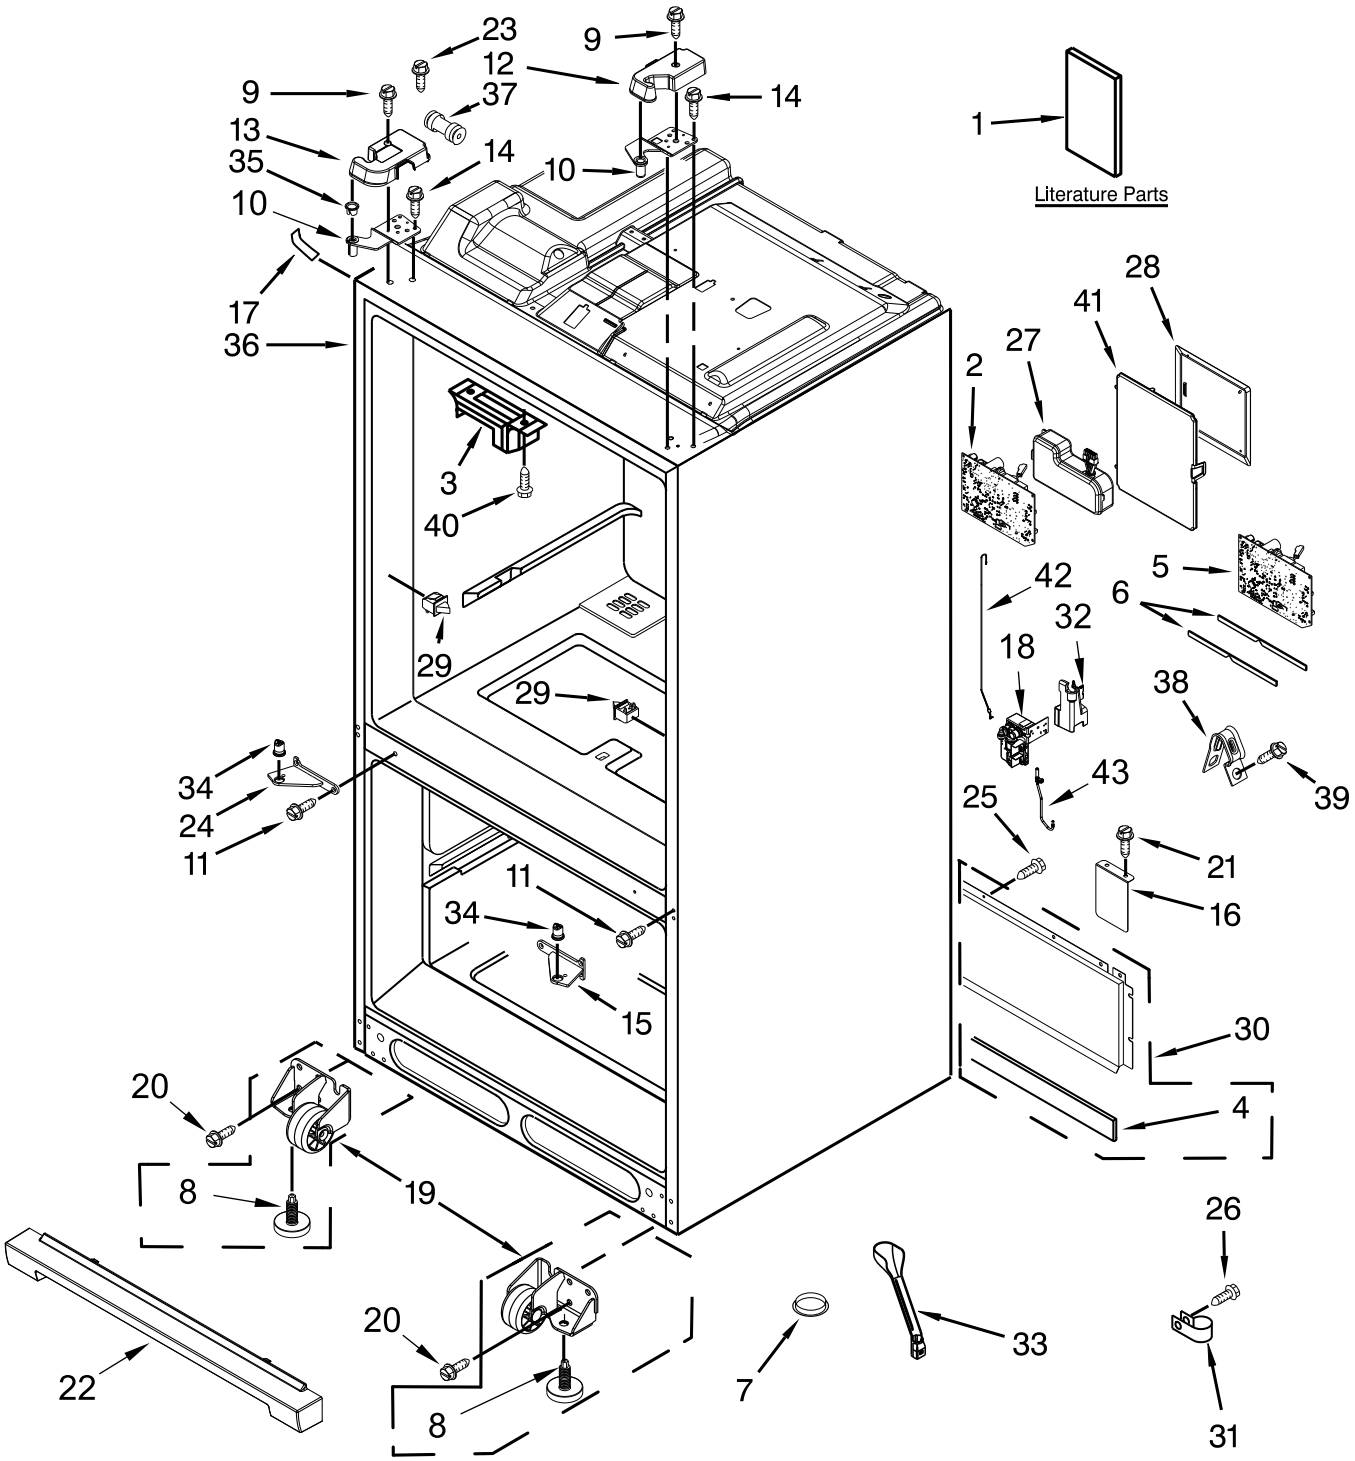

# CABINET PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Literature Parts |
| | W10568022 | Tech Sheet |
| | W10417000 | Use and Care Guide |
| | W10446590 | Energy Guide |
| 2 | W10453401 | Supply, Power |
| 3 | W10344432 | Block, Pivot |
| 4 | W10505487 | Gasket |
| 5 | W10581605 | Board, Control |
| 6 | W10415341 | Gasket, HV Box |
| 7 | | Plug, Hole |
| | A3076901 | Black |
| 8 | W10141622 | Brake, Roller |
| 9 | 12990521 | Screw |
| 10 | | Hinge, Top |
| | W10248409 | Right Hand |
| | W10248410 | Left Hand |
| 11 | W10403208 | Screw (White) |
| | W10403211 | Screw (Black) |
| | W10403212 | Screw (Grey) |
| 12 | | Cover, Right Hinge |
| | W10248562 | White |
| | W10407157 | Black |
| | W10407158 | Grey |
| 13 | | Cover, Left Hinge |
| | W10471615 | White |
| | W10471617 | Black |
| | W10471618 | Grey |

| Illus. No. | Part No. | Description |
|---|---|---|
| 14 | W10308751 | Screw (Black) |
| 15 | | Hinge, Center (Right) |
| | W10248433 | White |
| | W10248702 | Black |
| | W10248703 | Grey |
| 16 | W10336736 | Cover, Roller |
| 17 | | Cover, Corner |
| | 12587703W | White |
| | 12587703B | Black |
| | 12587703AP | Grey |
| 18 | W10455331 | Valve, Smart |
| 19 | | Assembly, Roller |
| | W10515762 | Right Hand |
| | W10515763 | Left Hand |
| 20 | 12991302 | Screw |
| 21 | 12990701 | Screw |
| 22 | | Grille, Toe |
| | W10637668 | White |
| | W10637669 | Black |
| | W10637671 | Grey |
| 23 | 12992601 | Screw |
| 24 | | Hinge, Center (Left) |
| | W10248434 | White |
| | W10248705 | Black |
| | W10248706 | Grey |
| 25 | W10141645 | Screw |
| 26 | 12990511 | Screw |

| Illus. No. | Part No. | Description |
|---|---|---|
| 27 | W10421948 | Supply, Power LED |
| 28 | W10485658 | Cover, Control Box |
| 29 | 12466105 | Switch, Light |
| 30 | W10523222 | Cover, Unit |
| 31 | M0108107 | Clamp, Tube |
| 32 | W10455330 | Cover, Valve |
| 33 | W10491298 | Tube, Drain |
| 34 | W10505294 | Coupler, Door |
| 35 | W10212137 | Retainer, Door |
| 36 | | Cabinet (Not a Servicable Part) |
| 37 | W10271541 | Connector, Union |
| 38 | 549193 | Clamp, Power Cord |
| 39 | W10141645 | Screw |
| 40 | 12990302 | Screw |
| 41 | W10277839 | Lid, HV |
| 42 | W10455337 | Tube, Water |
| 43 | W10455336 | Waterline, Customer Connection |

# REFRIGERATOR LINER PARTS

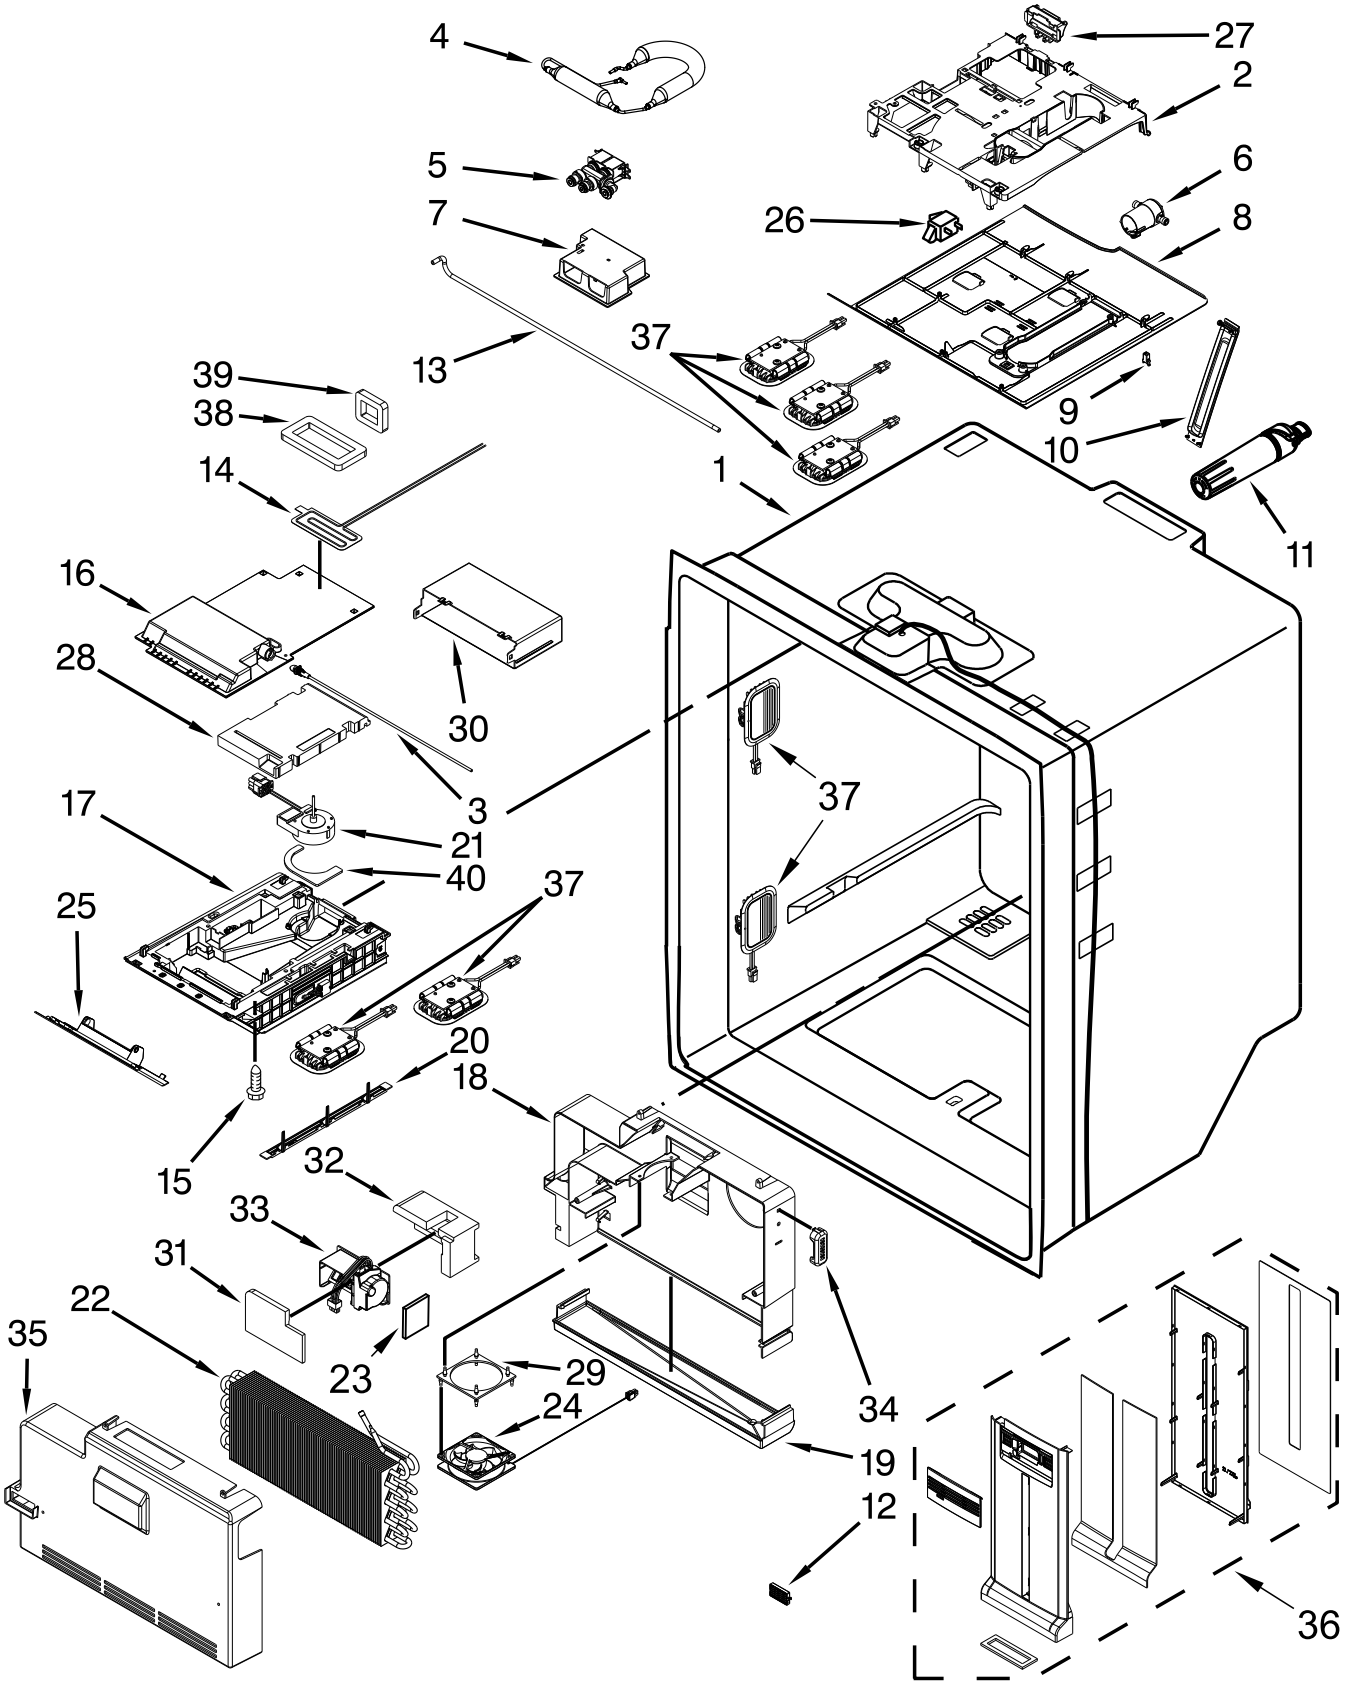

# REFRIGERATOR LINER PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Liner (Not A Serviceable Part) |
| 2 | W10657942 | Housing, Water System |
| 3 | W10482107 | Tube, Fill |
| 4 | W10394084 | Reservoir, Water (Also Order Wire Tie Part 8567668 Qty.5) |
| 5 | W10341329 | Valve, Dual Water |
| 6 | W10238156 | Housing, Water Filter |
| 7 | W10279854 | Enclosure, Valve |
| 8 | W10488685 | Cover, Water |
| 9 | 2223877 | Latch, Push |
| 10 | W10277949 | Door, Filter Access |
| 11 | W10609378 | Filter, Water |
| 12 | W10315189 | Filter, Air |
| 13 | W10515793 | Waterline, Valve to Hinge |
| 14 | W10554299 | Heater, Fill Tube |
| 15 | 12990518 | Screw |
| 16 | W10598013 | Cover, Icebox |
| 17 | W10492817 | Assembly, Icebox (Foamed) |
| 18 | W10469927 | Enclosure, Evaporator |
| 19 | W10537710 | Pan, Drain |
| 20 | W10505516 | Trim, Icebox |
| 21 | W10460280 | Assembly, Blower |
| 22 | | Evaporator Assembly - For more information on this service part, please contact 1-800-832-7174 |
| 23 | W10470981 | Gasket, Damper |
| 24 | W10395278 | Motor, Fan (Also Order Fan Support #W10389152) |
| 25 | W10553630 | Assembly, Fascia |
| 26 | C3680310V | Switch, Light |
| 27 | W10434481 | Bracket, Reservoir |
| 28 | W10280983 | Insulation |
| 29 | W10389152 | Support, Fan |
| 30 | W10635022 | Adapter, Icebox |
| 31 | W10389154 | Retainer, Damper |
| 32 | W10389149 | Support, Damper |
| 33 | W10248595 | Damper, Electronic Control |
| 34 | W10438957 | Cover, Thermistor |
| 35 | W10501260 | Cover, Evaporator |
| 36 | W10624930 | Assembly, Air Tower |
| 37 | W10637153 | Assembly, LED Light Module |
| 38 | W10280988 | Gasket, Rear Supply |
| 39 | W10320706 | Gasket, Rear Return |
| 40 | W10392172 | Gasket, Fan |
| | | Following Parts Not Illustrated |
| | W10277801 | Harness, Refrigerator Lights |
| | W10570599 | Harness, Dual Valve |
| | W10277799 | Harness, Evaporator Wire (Includes Thermistors) |

# FREEZER LINER PARTS

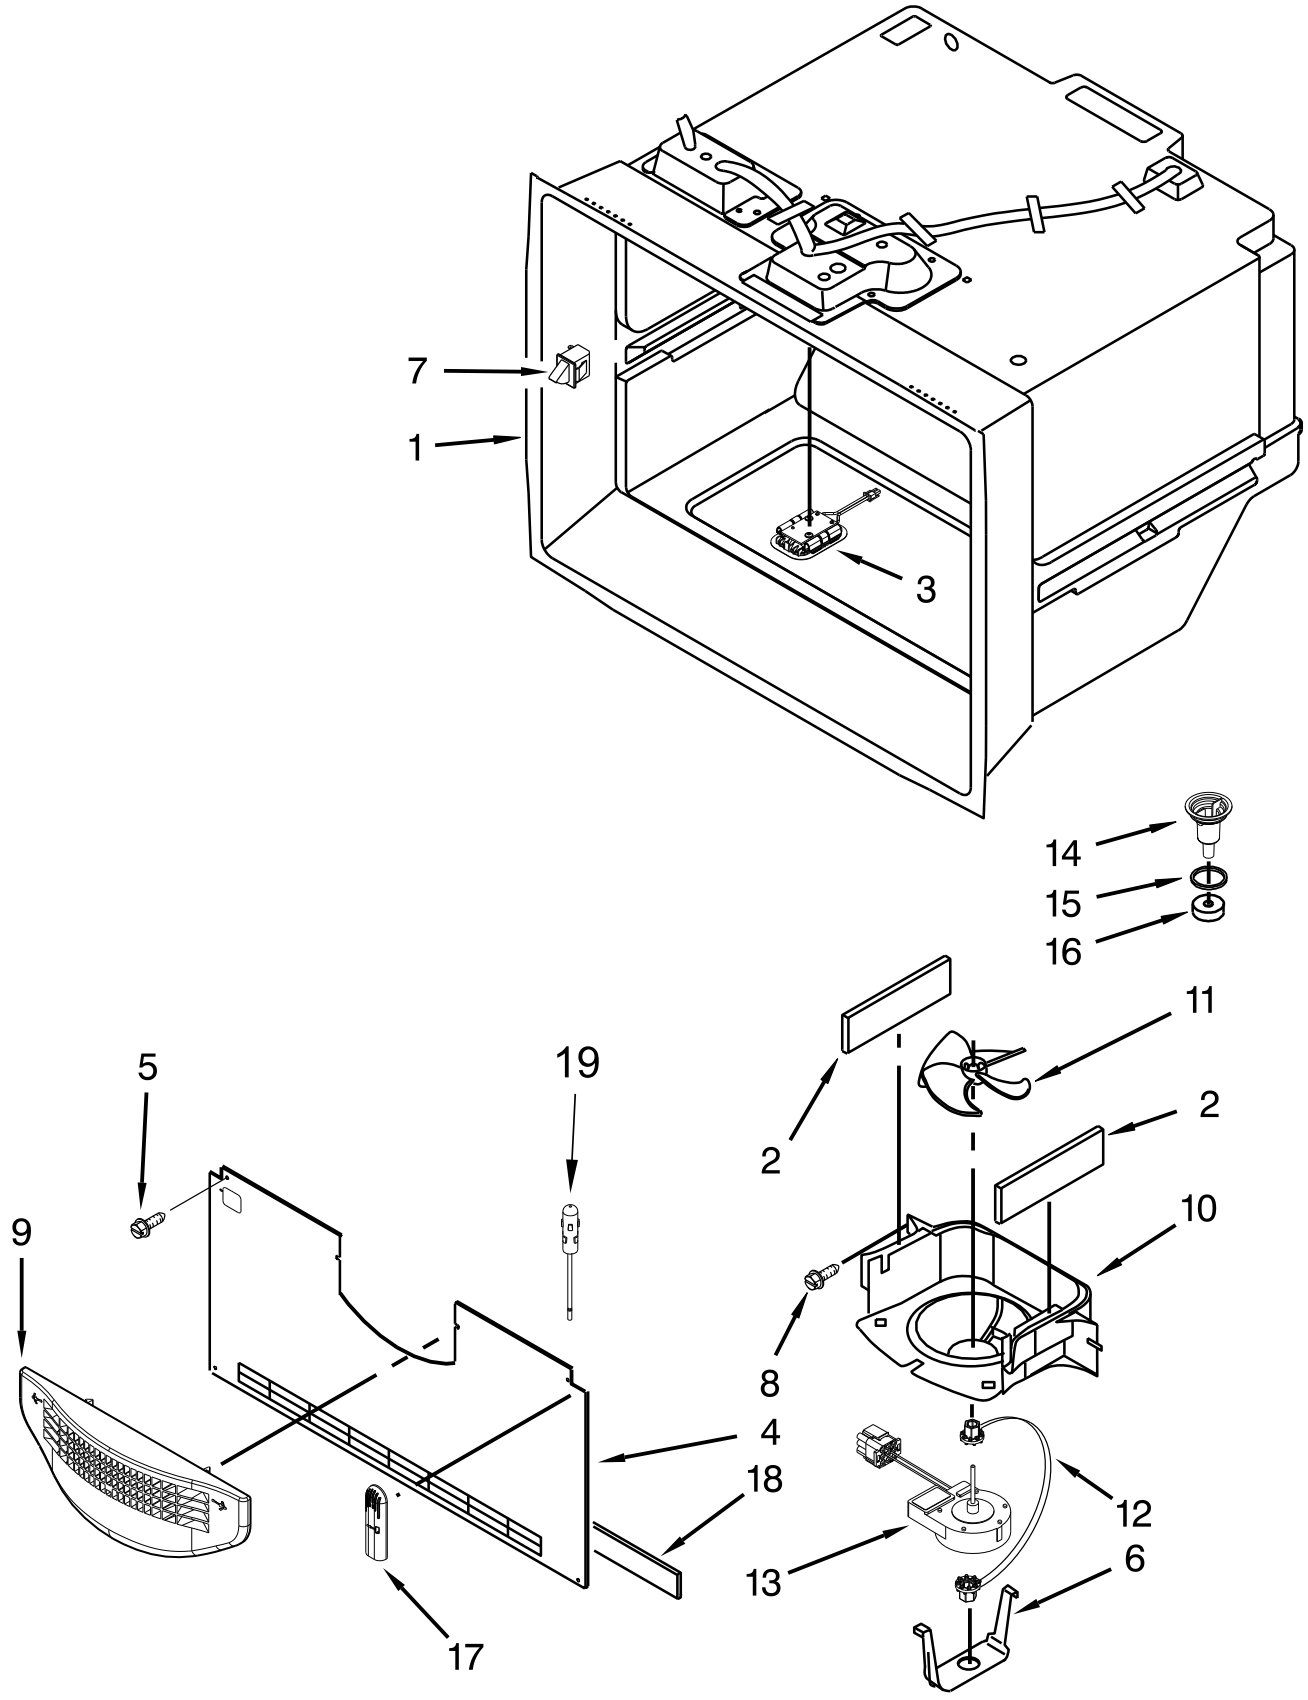

# FREEZER LINER PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Liner (Not A Seviceable Part) |
| 2 | A3189392 | Gasket, Foam |
| 3 | W10637153 | Assembly, LED Light Module |
| 4 | W10513424 | Cover, Evaporator |
| 5 | 12990511 | Screw |
| 6 | 12956601 | Clip, Fan Motor |
| 7 | C3680310V | Switch, Light |
| 8 | 12990504 | Screw |
| 9 | W10496613 | Grille, Air (Freezer) |
| 10 | W10363507 | Shroud, Evaporator Fan |
| 11 | 12986101 | Blade, Fan |
| 12 | 12951101 | Grommet, Fan Motor |
| 13 | W10514110 | Motor, Evaporator (Includes Harness, Thermistor, and Defrost Thermostat) |
| 14 | W10503250 | Funnel, Drain |
| 15 | M0500703 | Seal |
| 16 | B8381501 | Gasket, Drain |
| 17 | W10405166 | Cover, Thermistor |
| 18 | W10531268 | Gasket, Dual Evaporator |
| 19 | W10280385 | Thermistor |

# REFRIGERATOR DOOR PARTS

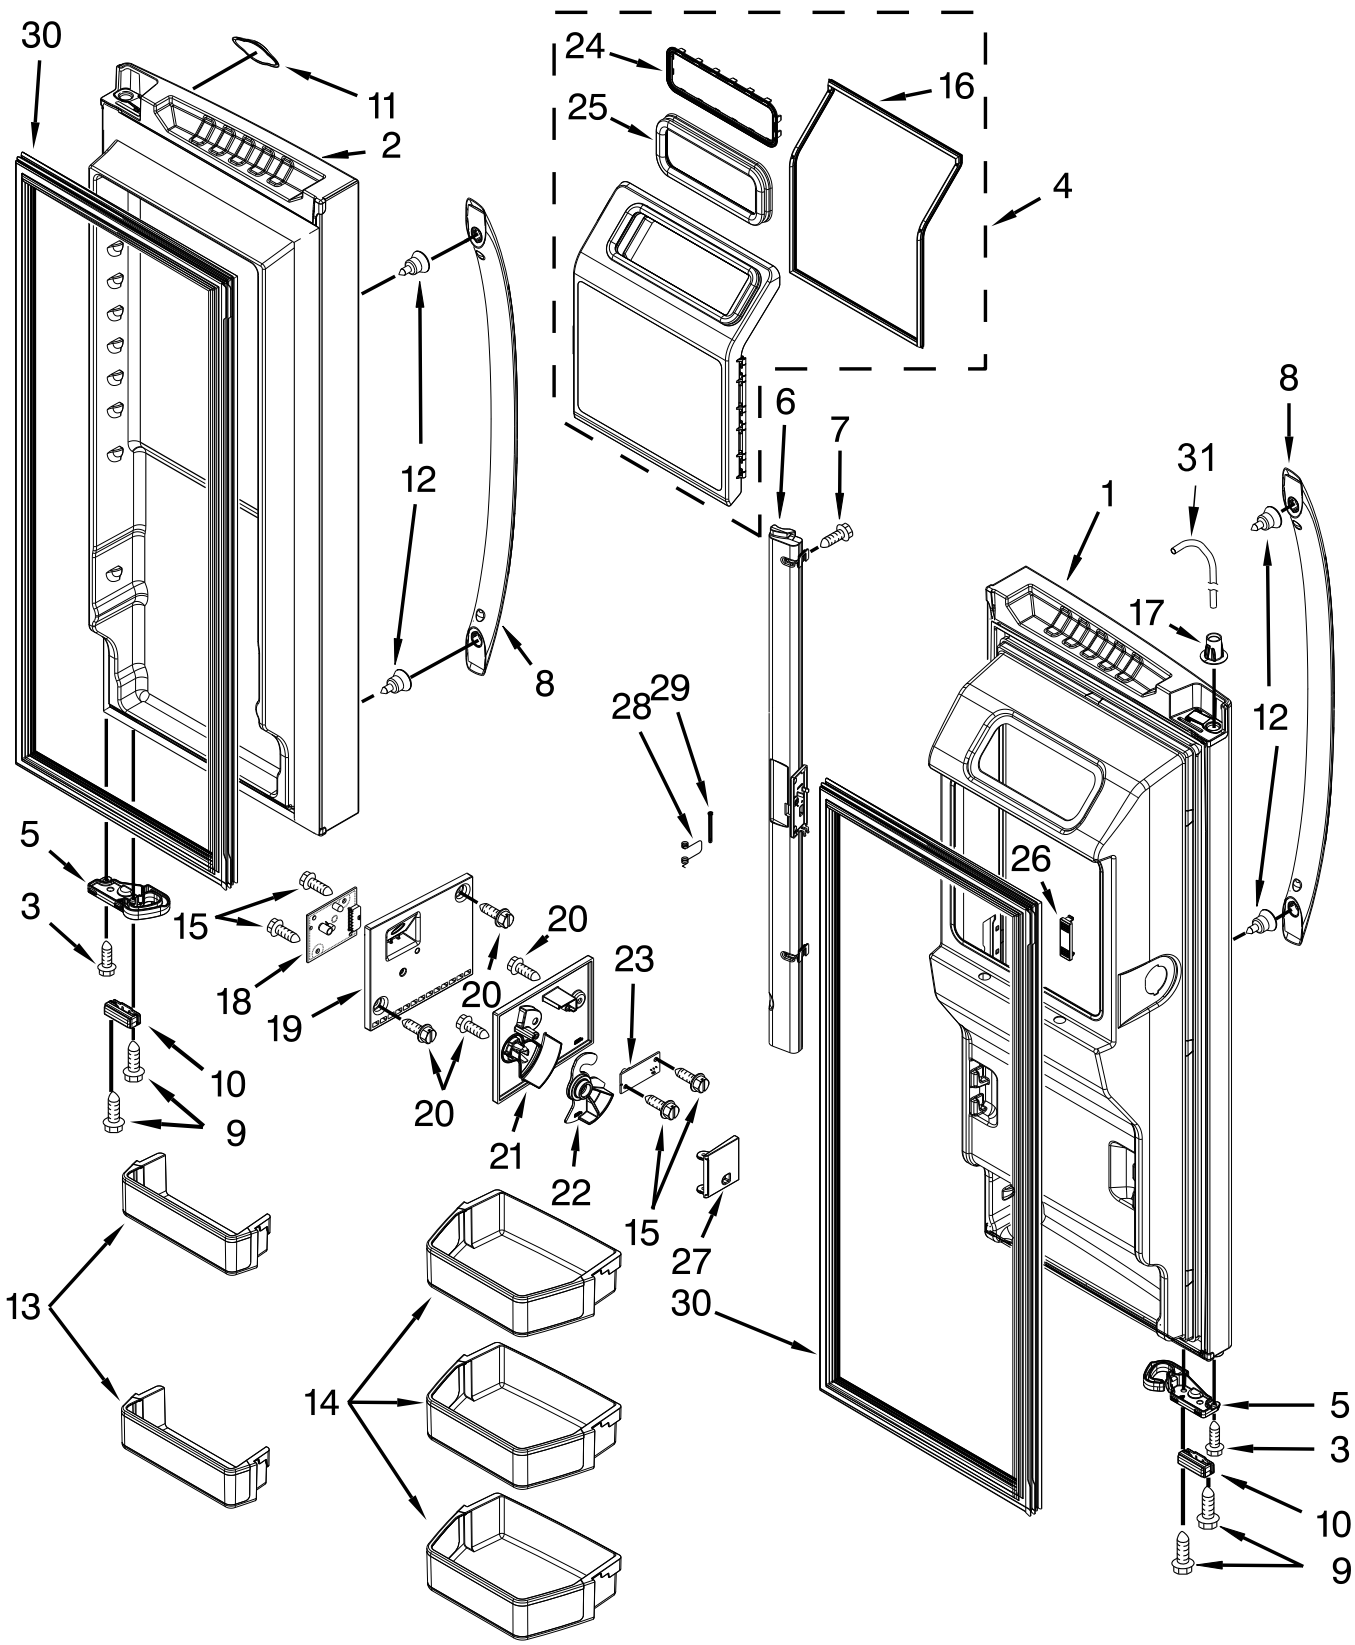

# REFRIGERATOR DOOR PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Door, Left |
| | W10417771 | White |
| | W10417772 | Black |
| | W10417773 | Stainless |
| | W10417774 | Sparkle Steel |
| 2 | | Door, Right |
| | W10340316 | White |
| | W10341282 | Black |
| | W10341284 | Stainless |
| | W10403290 | Sparkle Steel |
| 3 | W10464016 | Screw |
| 4 | W10549589 | Door, Ice |
| 5 | | Latch, Door |
| | W10355634 | Left Hand |
| | W10372267 | Right Hand |
| 6 | | Mullion, Door |
| | W10654760 | White |
| | W10654761 | Black |
| | W10654762 | Grey |
| 7 | 12990204 | Screw |
| 8 | | Handle, Door |
| | W10548948 | White |
| | W10548947 | Black |
| | W10557410 | Brushed Aluminum |
| 9 | 12990504 | Screw |
| 10 | | Bumper, Door |
| | W10407175 | White |
| | W10407187 | Black |
| | W10407188 | Grey |
| 11 | | Nameplate |
| | W10391355 | White |
| | W10393265 | Grey |
| 12 | W10460893 | Screw |
| 13 | W10539117 | Trivet, 2 Liter |
| 14 | W10607728 | Bucket, Gallon |
| 15 | 489214 | Screw |
| 16 | W10347085 | Gasket, Ice Door |
| 17 | W10245516 | Clip, Tube |
| 18 | W10518658 | Board, Receiver Circuit |
| 19 | W10258510 | Cover, Receiver |
| 20 | 3400065 | Screw (Stainless) |
| 21 | W10258502 | Cover, Emitter |
| 22 | W10258540 | Slide, Icemaker Shut Off |
| 23 | W10518659 | Board, Emitter Circuit |
| 24 | W10400825 | Retainer, Ice Chute |
| 25 | W10347087 | Gasket, Ice Chute |
| 26 | W10646855 | Vent, Thermistor |
| 27 | W10258520 | Door, Emitter |
| 28 | 2198635 | Spring, Door |
| 29 | 2198634 | Pin, Door |
| 30 | | Gasket, Door |
| | W10249089 | White |
| | W10407145 | Black |
| | W10407146 | Grey |
| 31 | W10515777 | Tube, Water |

# FREEZER DOOR PARTS

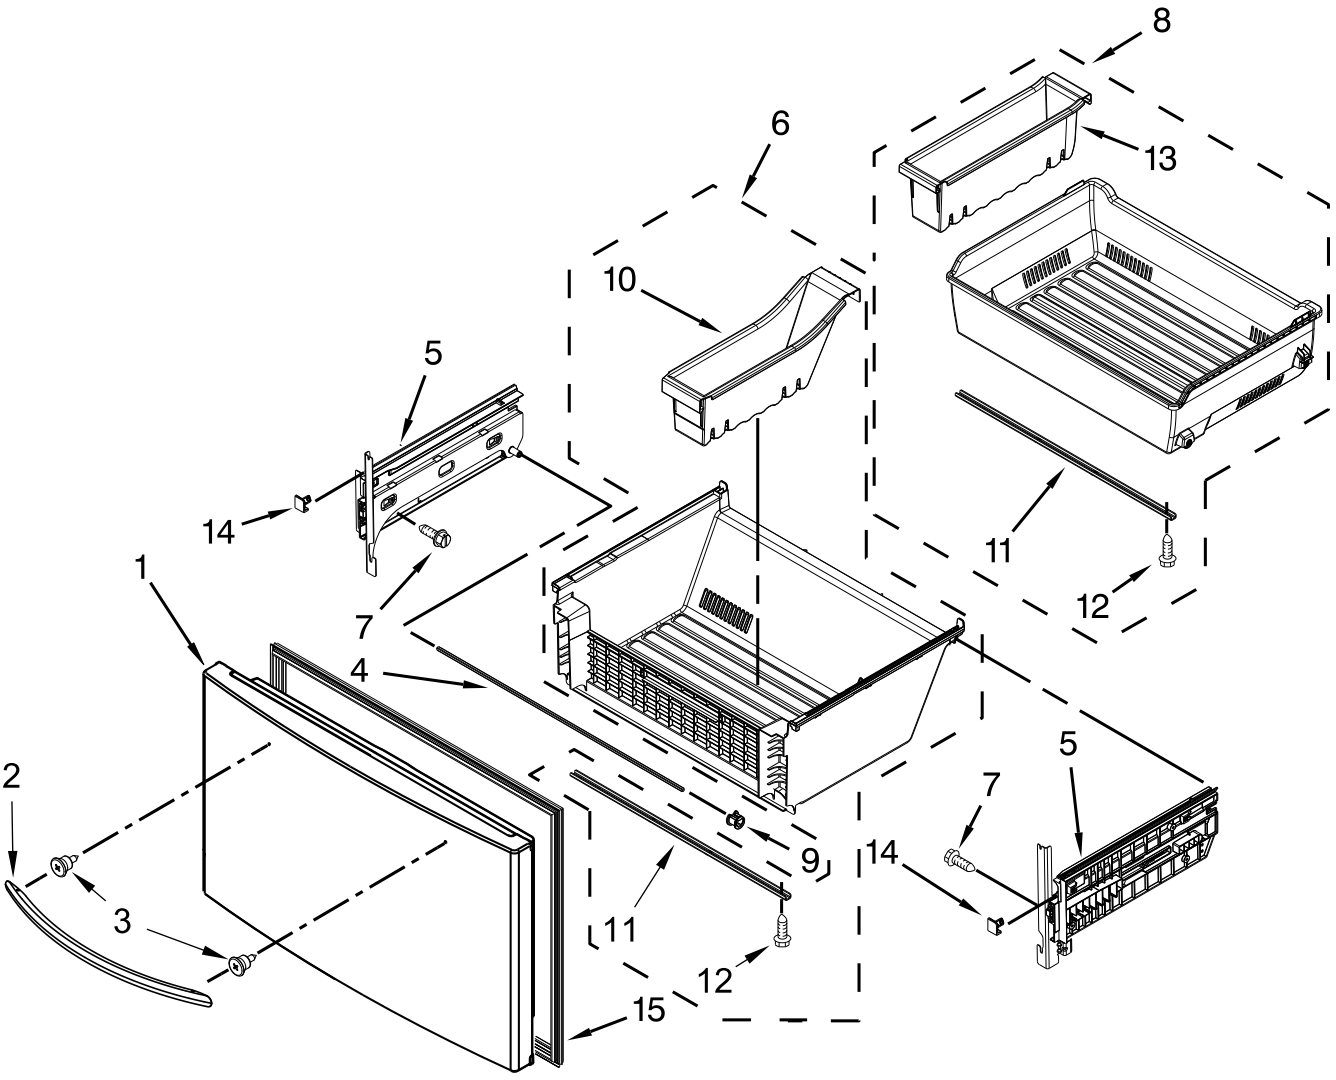

# FREEZER DOOR PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Door, Freezer |
| | W10340319 | White |
| | W10341277 | Black |
| | W10341279 | Stainless |
| | W10417857 | Sparkle Steel |
| 2 | | Handle, Door |
| | W10548944 | White |
| | W10548943 | Black |
| | W10557413N | Stainless |
| 3 | W10460893 | Screw |
| 4 | W10503522 | Shaft |
| 5 | | Assembly, Bracket |
| | W10625067 | Left Hand |
| | W10625068 | Right Hand |
| 6 | W10594047 | Bin, Lower |
| 7 | 12990518 | Screw |
| 8 | W10491768 | Bin, Upper |
| 9 | W10248509 | Clip, Shaft |
| 10 | W10507444 | Divider, Lower |
| 11 | W10469177 | Support, Pan |
| 12 | 489443 | Screw (Stainless) |
| 13 | W10485654 | Divider, Upper |
| 14 | | Stop, Pan |
| | W10485096 | Left Hand |
| | W10485089 | Right Hand |
| 15 | | Gasket, Door |
| | W10249094 | White |
| | W10248748 | Black |
| | W10248749 | Grey |

# UNIT PARTS

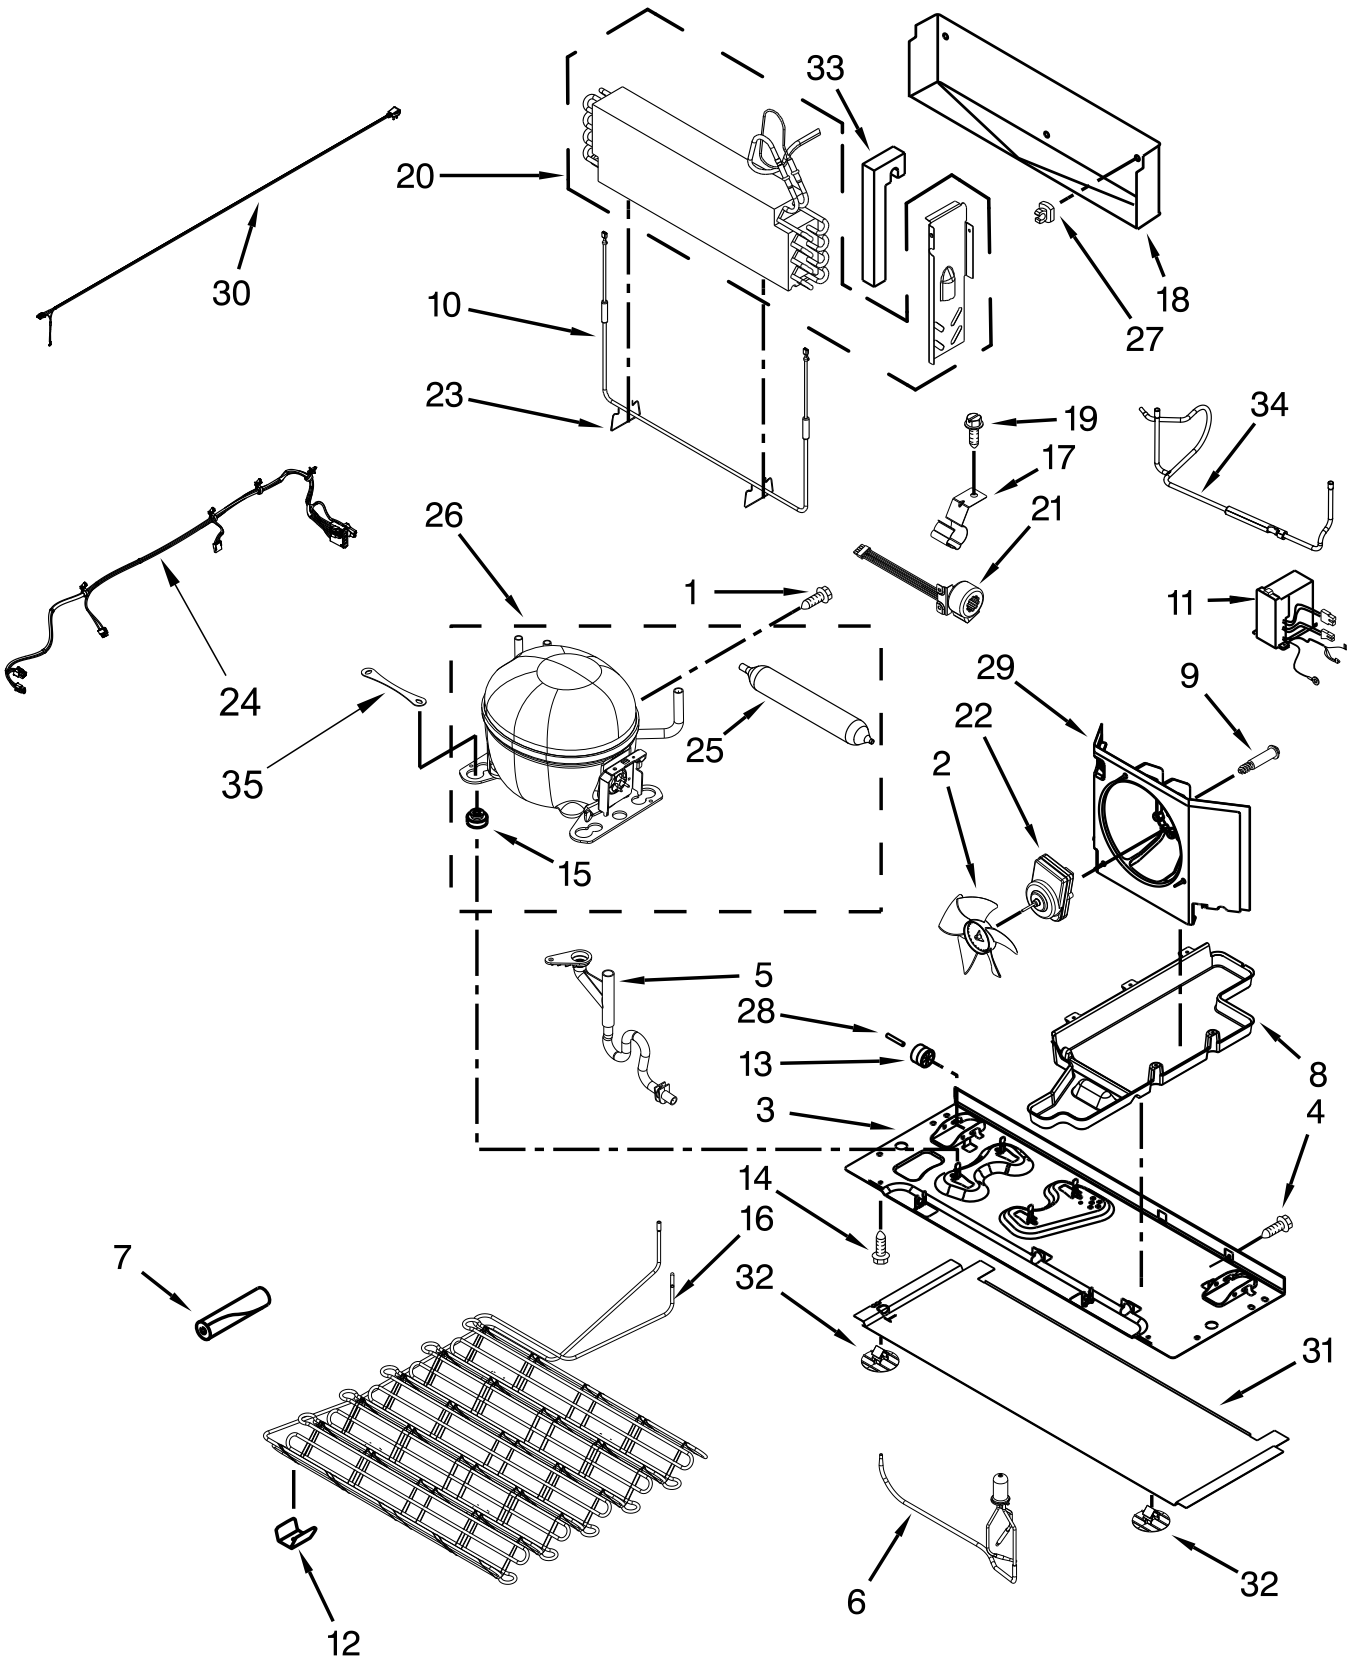
33
20
30
10
23
18
27
19
34
17
21
26
1
11
24
29
9
22
2
35
25
15
5
28
13
8
3
4
14
16
7
32
31
12
6
32

# UNIT PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | W10141625 | Screw |
| 2 | 12825802 | Blade, Fan |
| 3 | W10570074 | Baseplate |
| 4 | 12990511 | Screw |
| 5 | W10547687 | Extension, Drain |
| 6 | W10391081 | Assembly, Valve Body |
| 7 | W10303521 | Sleeve |
| 8 | W10238584 | Tray, Evaporator |
| 9 | W10622701 | Screw |
| 10 | 12729128 | Heater, Defrost |
| 11 | W10186719 | Assembly, Inverter Box |
| 12 | W10248621 | Clip, Condenser |
| 13 | 12477102 | Roller |
| 14 | 12992101 | Screw |
| 15 | 10835903SP | Grommet, Compressor |
| 16 | W10627646 | Assembly, Condenser |
| 17 | W10391376 | Bracket, Valve |
| 18 | W10342573 | Tray, Drip |
| 19 | W10141645 | Screw |
| 20 | W10248589 | Evaporator |
| 21 | W10364560 | Coil, 3 Way Valve |
| 22 | 2188874 | Motor, Condenser |
| 23 | 10428101 | Clip, Heater |
| 24 | W10494224 | Harness, Unit |
| 25 | W10286069 | Drier |
| 26 | W10168473 | Compressor |
| 27 | W10142294 | Screw |
| 28 | 12477202 | Axle, Roller |
| 29 | W10406719 | Shroud |
| 30 | W10494227 | Cord, Power |
| 31 | W10278140 | Cover, Bottom Unit |
| 32 | W10296661 | Clip, Bottom Cover |
| 33 | W10491355 | Gasket, Airdam |
| 34 | W10626970 | Assembly, Suction Tube |
| 35 | W10236396 | Strap, Compressor |
| | | Following Parts Not Illustrated |
| | 978025 | Valve, Access |
| | 978026 | Valve, Access |
| | 978027 | Valve, Access |
| | 978028 | Valve, Access |
| | 978029 | Valve, Access |
| | 978030 | Valve, Access |
| | 876764 | Valve, Access |
| | | REFRIGERANT CHARGE 5.50 oz. (R-134A) |

# SHELF PARTS

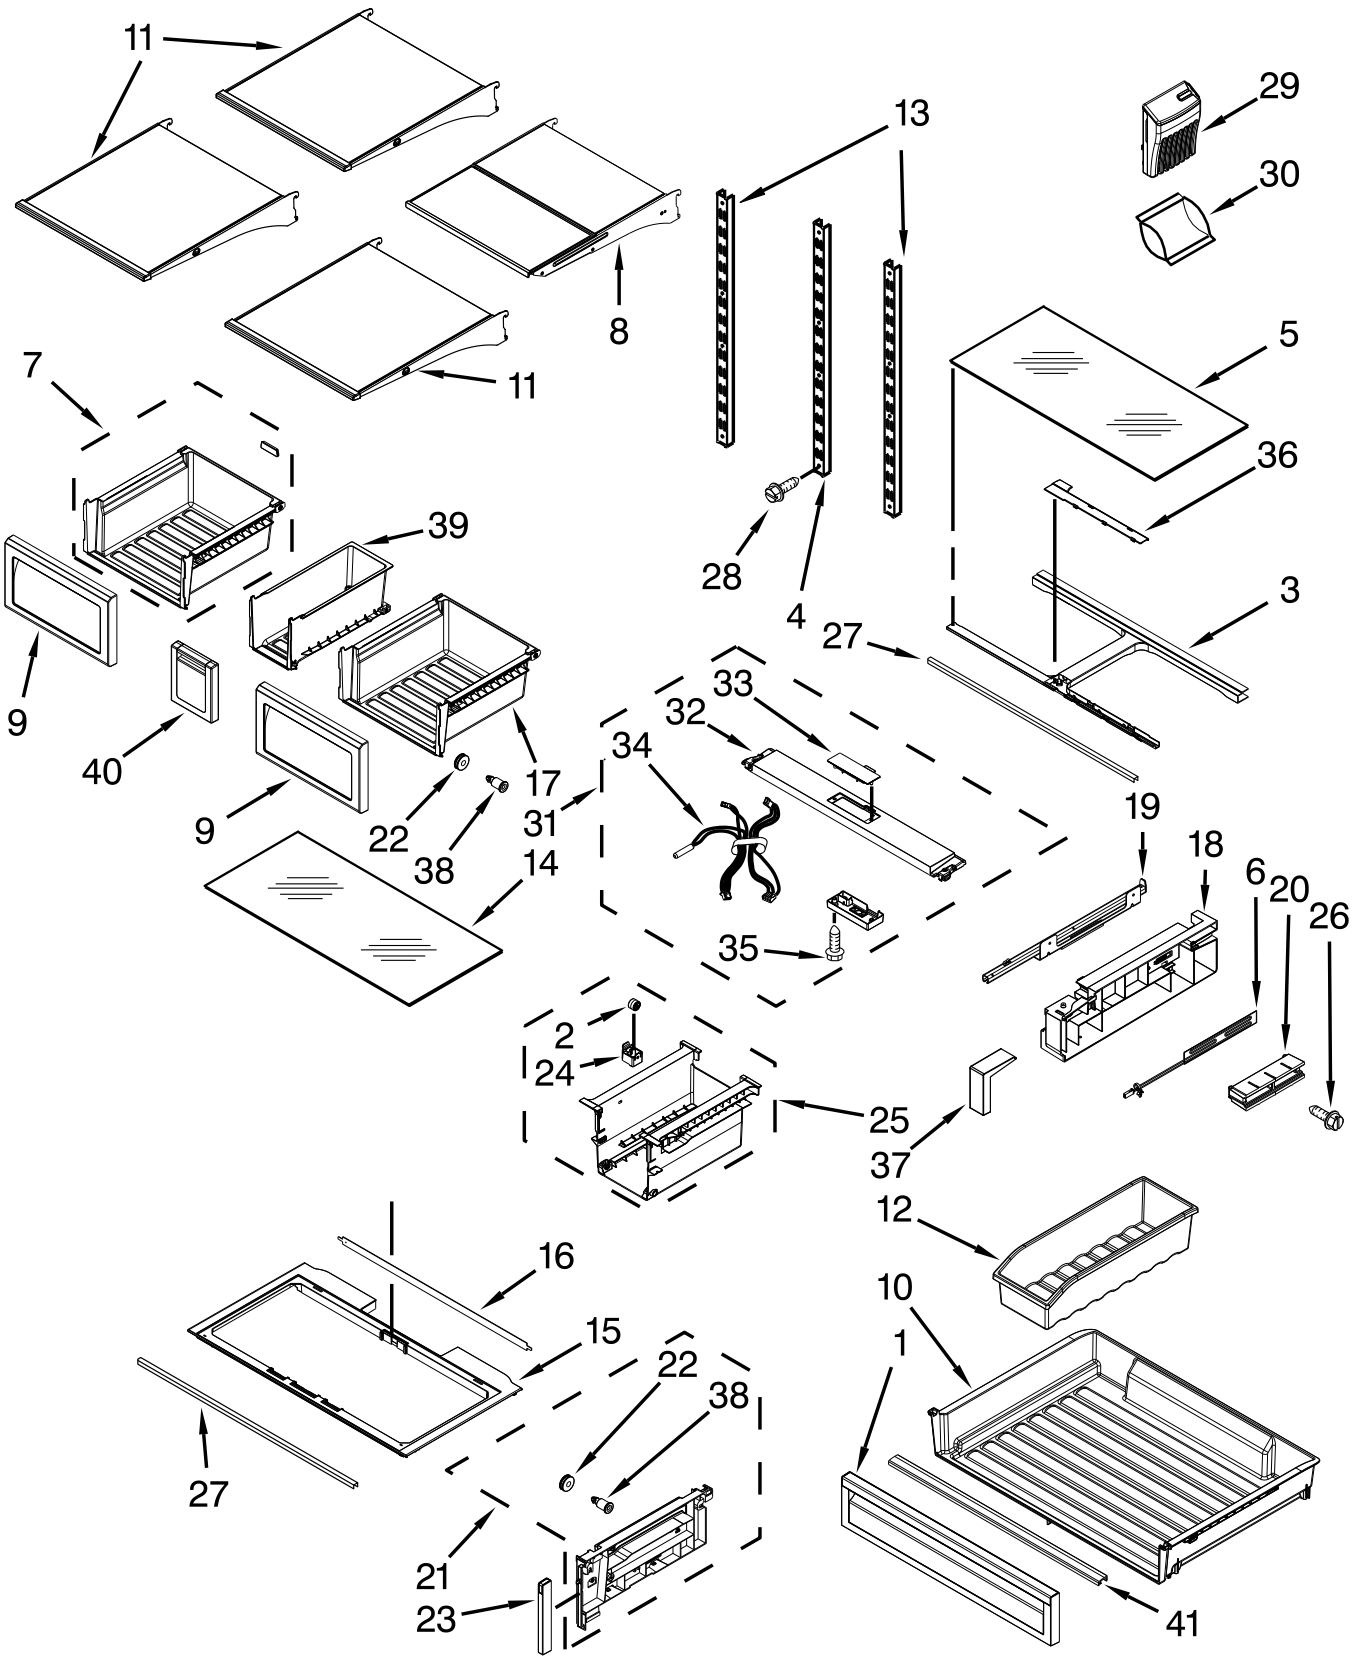
11
11
8
13
29
30
5
36
3
27
28
4
7
39
9
40
9
22
38
17
31
34
32
33
14
35
19
18
6
20
26
2
24
25
37
12
16
15
22
38
27
21
23
10
1
41

# SHELF PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | W10510417 | Front, Pantry |
| 2 | W10248789 | Roller, Center |
| 3 | W10489978 | Support, Pantry |
| 4 | W10248516 | Ladder, Center |
| 5 | W10628815 | Glass, Pantry |
| 6 | W10342618 | Heater, Pantry |
| 7 | W10422706 | Pan, Crisper |
| 8 | W10578242 | Shelf, Tuck |
| 9 | W10510695 | Front, Crisper |
| 10 | W10514690 | Pan, Pantry |
| 11 | W10578239 | Shelf, Stationary |
| 12 | W10467369 | Divider, Pantry |
| 13 | W10372170 | Ladder, Side |
| 14 | W10628814 | Glass, Crisper |
| 15 | W10407377 | Cover, Crisper |
| 16 | W10248967 | Support, Rear |
| 17 | W10387757 | Pan, Crisper |
| 18 | | Plate, Side Pantry |
| | W10248834 | Left Hand |
| | W10317523 | Right Hand |
| 19 | | Slide, Pantry |
| | W10248531 | Left Hand |
| | W10248532 | Right Hand |
| 20 | W10432697 | Insulation, Sideplate |
| 21 | | Plate, Crisper |
| | W10549601 | Left Hand |
| | W10549602 | Right Hand |
| 22 | W10248544 | Roller, Guide |
| 23 | W10467415 | Plate, Crisper Front |
| 24 | W10530314 | Housing, Roller |
| 25 | W10549605 | Assembly, Center Crisper Support |
| 26 | 8281136 | Screw |
| 27 | W10236512 | Support, Front |
| 28 | W10423560 | Screw |
| 29 | W10408747 | Holder, Filter |
| 30 | W10346771 | Filter, Produce Preserver |
| 31 | W10584146 | Cover, Front (Includes LED Assembly) |
| 32 | W10398004 | Cover, Top |
| 33 | W10565996 | Assembly, User Interface |
| 34 | W10539187 | Harness, Wire (Includes Thermistor) |
| 35 | 12990204 | Screw |
| 36 | W10490266 | Support, Pantry Cover |
| 37 | W10467416 | Plate, Pantry Front |
| 38 | W10257246 | Axle, Roller |
| 39 | W10387778 | Pan, Crisper |
| 40 | W10467395 | Front, Crisper |
| 41 | W10467379 | Handle, Pantry |

# DISPENSER FRONT PARTS

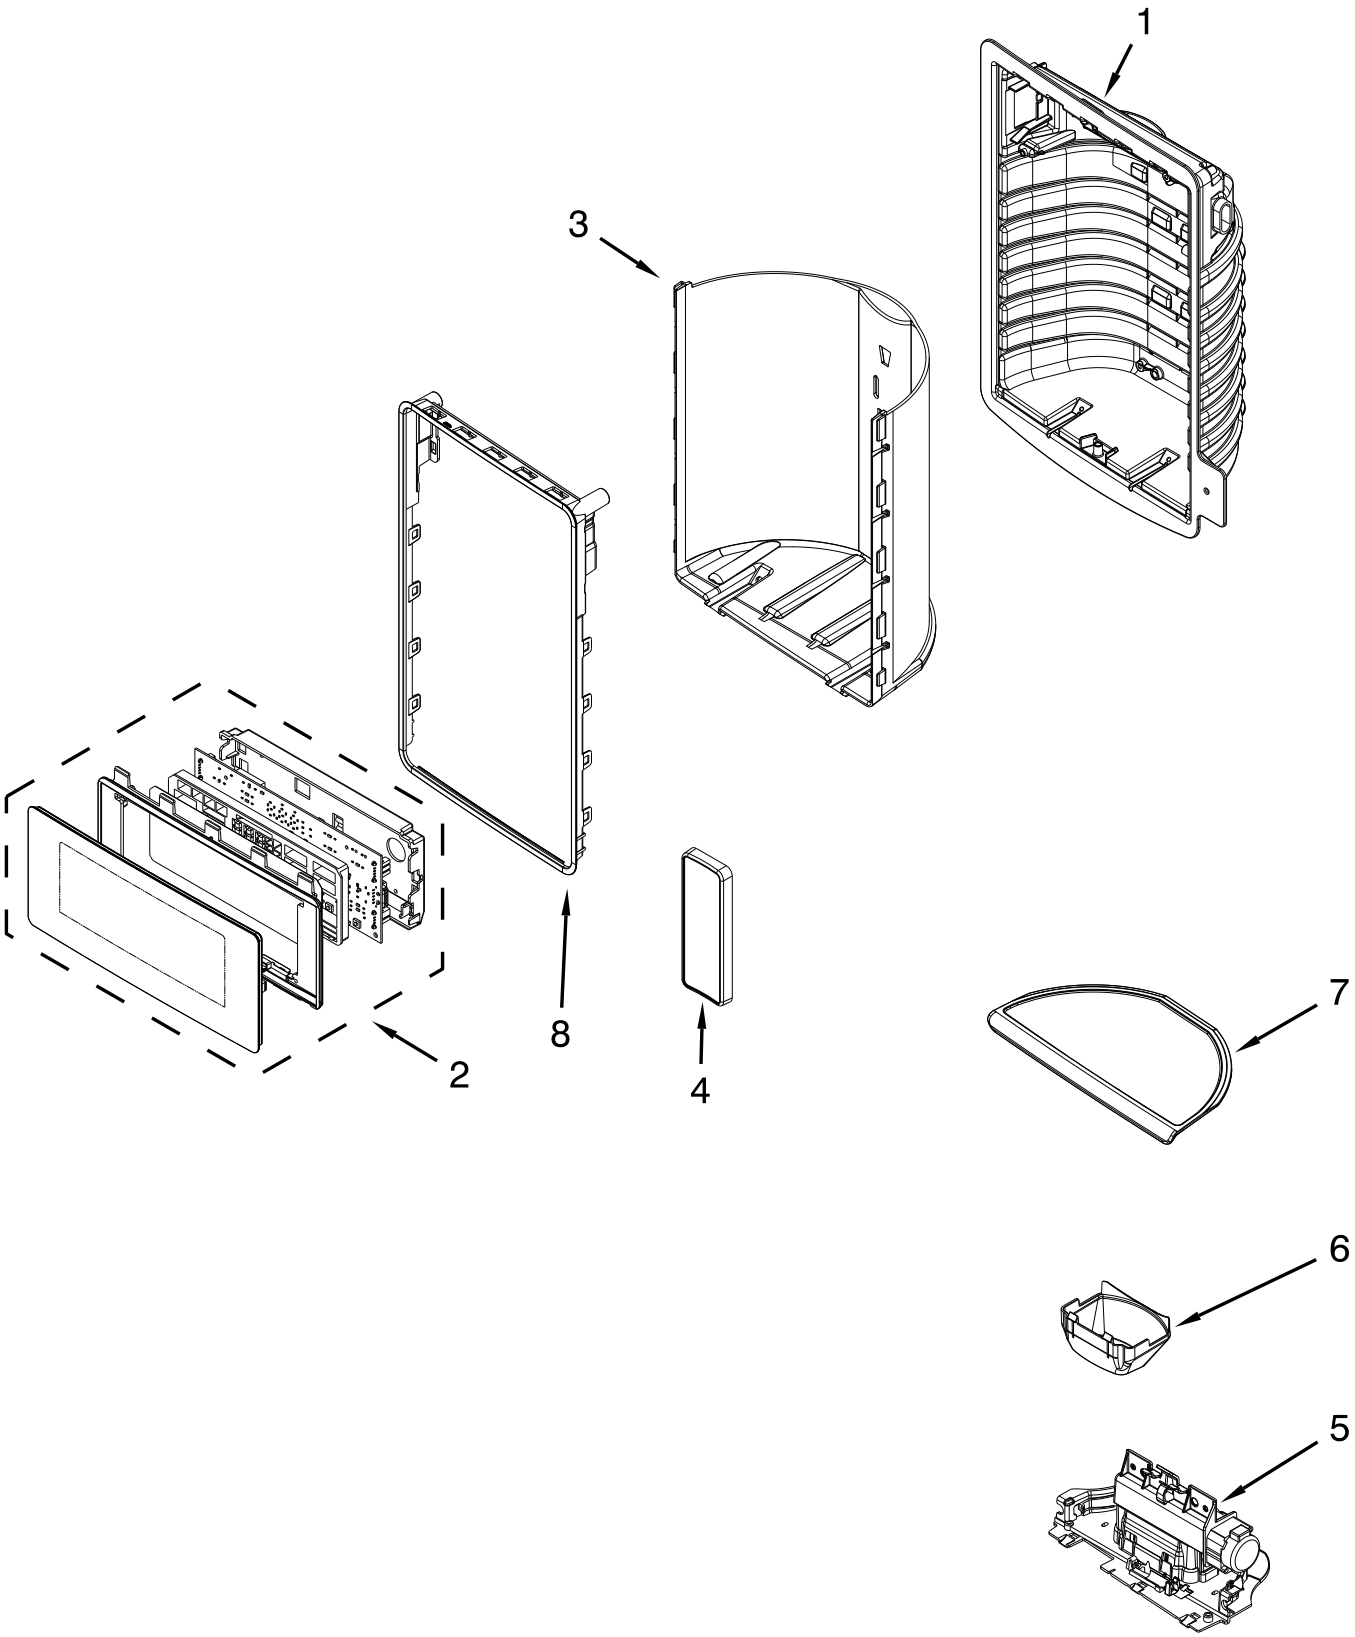

# DISPENSER FRONT PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | | Housing, Dispenser (Not Serviced) |
| 2 | | Assembly, User Interface |
| | W10559668 | Silver |
| | W10559669 | Black |
| 3 | | Wall, Dispenser False |
| | W10606658 | White |
| | W10606657 | Black |
| | W10606648 | Grey |
| | W10606653 | White (WRF989SDAH*) |
| 4 | | Assembly, Pad |
| | W10473006 | Cast Grey |
| | W10370592 | Black |
| | W10473007 | Tempest Grey |
| | W10420671 | Cast Grey (WRF989SDAH*) |
| 5 | W10577864 | Assembly, Seperator |
| 6 | W10435760 | Guide, Ice |
| 7 | | Tray, Drip |
| | W10606644 | White |
| | W10606643 | Black |
| | W10606639 | Grey |
| | W10606641 | White (WRF989SDAH*) |
| 8 | | Ring, Trim |
| | W10462438 | White |
| | W10462439 | Black |
| | W10402180 | Chrome |

# MOTOR AND ICE CONTAINER PARTS

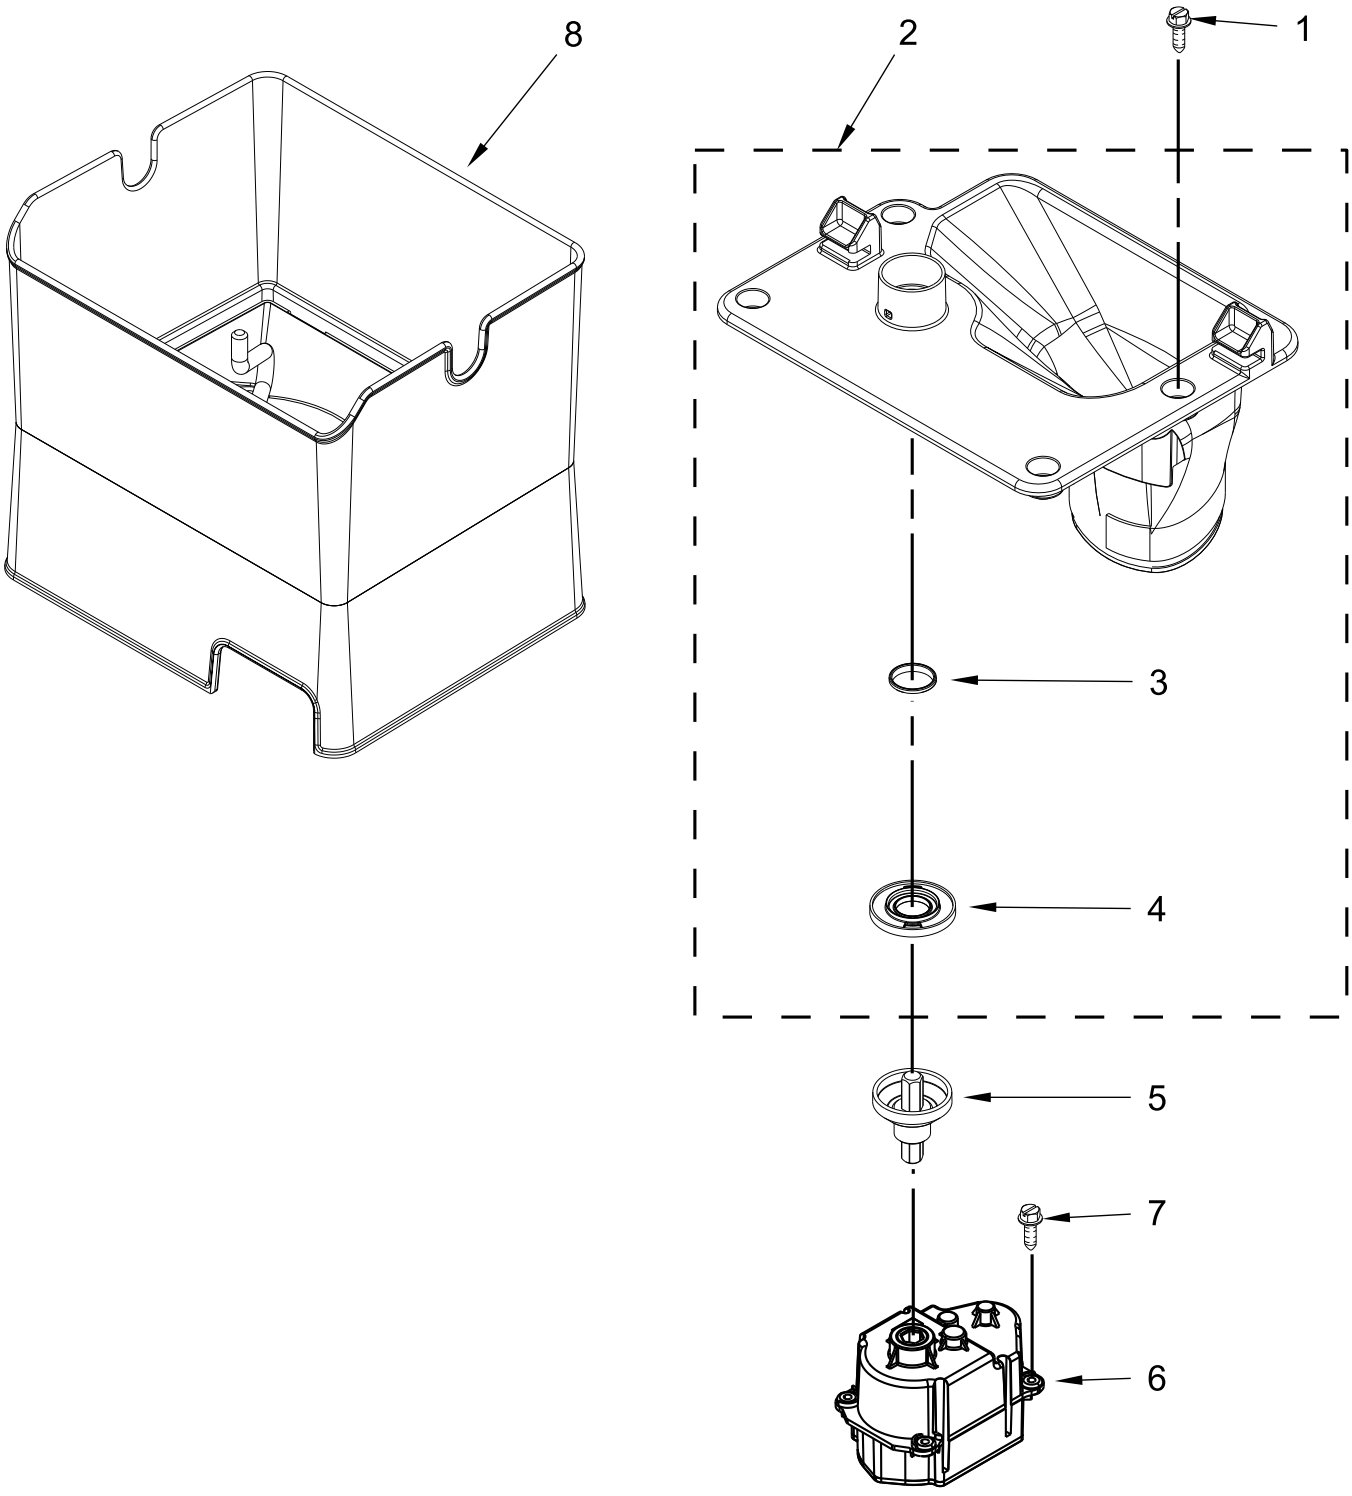

# MOTOR AND ICE CONTAINER PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | W10272364 | Screw |
| 2 | W10347051 | Plate, Ice Chute |
| 3 | 2198628 | Seal |
| 4 | W10347120 | Clip, Retainer |
| 5 | W10347114 | Shaft, Motor |
| 6 | W10215646 | Motor, Dispenser |
| 7 | 8281163 | Screw (Stainless) |
| 8 | W10347093 | Assembly, Ice Container |

# ICEMAKER PARTS

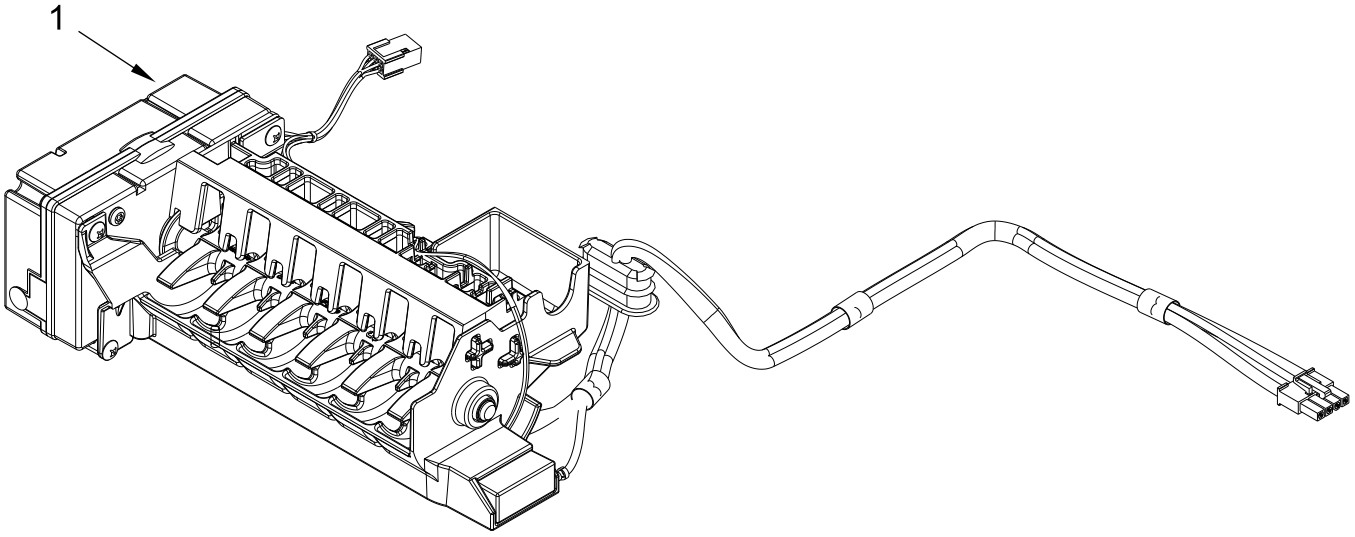

# ICEMAKER PARTS

| Illus. No. | Part No. | Description |
|---|---|---|
| 1 | W10498261 | Assembly, Icemaker |

# OPTIONAL PARTS

### PAINT, TOUCH-UP (1/2OZ.)

| Illus. No. | Part No. | Description |
|---|---|---|
| | 72017 | White |
| | 72032 | Black |
| | 511873 | White Porcelain (2 oz.) |
| | 4392899 | Biscuit/Bisque |

### PAINT, PRESSURIZED SPRAY (12 OZ.)

| Illus. No. | Part No. | Description |
|---|---|---|
| | 350930 | White |
| | 350939 | Enamel, Black |
| | 285006 | Black |
| | 350942 | White Primer |
| | 4392901 | Biscuit/Bisque |

### PAINT, BULK (1 QT.)

| Illus. No. | Part No. | Description |
|---|---|---|
| | 799344 | White |

### MISCELLANEOUS

| Illus. No. | Part No. | Description |
|---|---|---|
| | 212643 | Sealer, Gum (4 Feet) |
| | 479502 | Tape, Vinyl (3/4 x 108") |
| | 876370 | Insulation (2 Pieces, 3" x 24" x 48") |
| | 876305 | Insulation Kit (14 Pieces, 3" x 24" x 48") |
| | 978941 | Insulation, Fiberglass (63 1/2" x 35 1/2" x 2 5/8") |
| | 876029 | Kit, Foam Slab (30" x 32 1/2" x 1 1/2") |
| | 505587 | Sealer, Mastic (1 Qt) |
| | 503695 | Cork, Sealer |
| | 20000008 | Cleaner, Stainless Steel |
| | 542638 | Grease, Silicone (1/2 Oz.) |
| | 542639 | Cement, Alumilastic (1 1/4 Oz.) |
| | 833938 | Kit, Terminal Connector |

### TORX SCREW WRENCH

| Illus. No. | Part No. | Description |
|---|---|---|
| | 1117510 | Torx Key |